

How to Clean the Diffuser

A. Image problem caused by dust

If your scanner has image problems as in these samples you can try to clean for dust & particles in the optical path (diffuser or lamp). Cleaning procedures are described on Page 2.



Fig-1

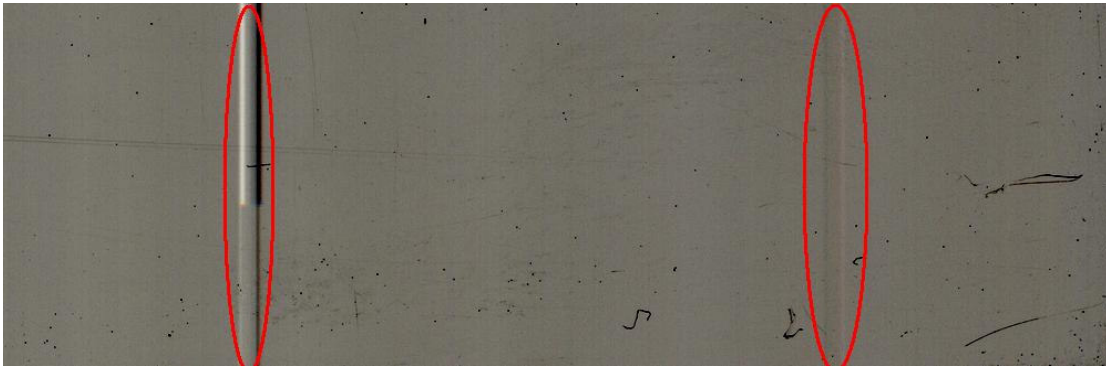


Fig-2

B. Clean methods

PrimeFilm 1800AFL/3600Pro/3650Pro3 & 3610AFL

1. Using a can of compressed air with straw attachment blow of the diffuser (hidden inside) left to right several times in quick short bursts in the red rectangle area (Fig. 3 & 4)



Fig.3 for 1800AFL/3600Pro/Pro3



Fig.4 for 3610AFL